


## VENT HOOD DUCT COVER

VH36-2-DC / VH42-2-DC / VH48-2-DC / VH60-2-DC

Read and follow all instructions. The vent hood duct covers are packaged and ready to be installed. Carefully slide the duct cover into the area above the already secured vent hood. Ensure the bottom perimeter of the duct cover rests flush with the vent hood. From the top of the hood, use a medium size Phillips screwdriver and the M5 18-8 screws and washers supplied with the duct cover to secure with the hood. Screws and washers are to be fastened through the vent hood's threaded nutserts. (see figure below).

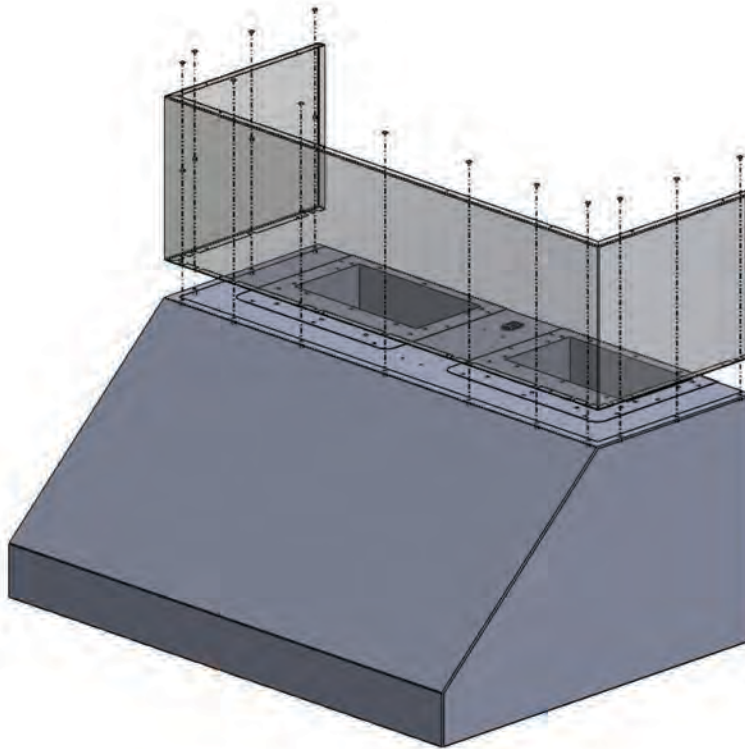

Reference the parts list below to identify the hardware included with your duct cover (to be used during installation).

Item	Description	VH36-2-DC	VH42-2-DC	VH48-2-DC	VH60-2-DC
1	M5 - 18-8 SST Phillips Round Head Truss	11	13	13	15
2	M6 - 18-8 SST Washer	11	13	13	15
3	Instruction Sheet	1	1	1	1

Note: If vent hood wall mounted spacers are installed, a duct cover filler panel may be purchased separately to enclose the gap between the duct cover and rear wall. Please visit our website [www.AMDDirect.com](http://www.AMDDirect.com) for more information.