





# REDSTONE - INSERT

## Dimension Insert Surrounds Spec

RS Model # of Fireplace	Trim Width	A	B	C	D
RS-2621	5/8" (16mm)	24" (610mm)	18-7/8" (480mm)	9-7/8" (250mm)	15-3/8" (390mm)
RS-3021	5/8" (16mm)	29-1/4" (743mm)	18-7/8" (480mm)	9-7/8" (250mm)	15-3/8" (390mm)
RS-3626	5/8" (16mm)	33-3/4" (857mm)	24" (610mm)	9-7/8" (250mm)	20-1/2" (521mm)

RS Model # of Fireplace	E	F	G	H	Existing Fireplace Minimum Opening (W x H x D)
RS-2621	22-3/4" (578mm)	22-3/4" (578mm)	9-1/4" (234mm)	18-1/2" (470mm)	23" (584mm) x 18-3/4" (477mm) x 10" (254mm)
RS-3021	28" (710mm)	28" (710mm)	9-1/4" (234mm)	18-1/2" (470mm)	28-1/4" (718mm) x 18-3/4" (477mm) x 10" (254mm)
RS-3626	32-3/8" (824mm)	32-3/8" (824mm)	9-1/4" (234mm)	23-5/8" (600mm)	32-5/8" (829mm) x 23-7/8" (607mm) x 10" (254mm)


\*5/8" & 1-5/8" trim included in box for built-in installations

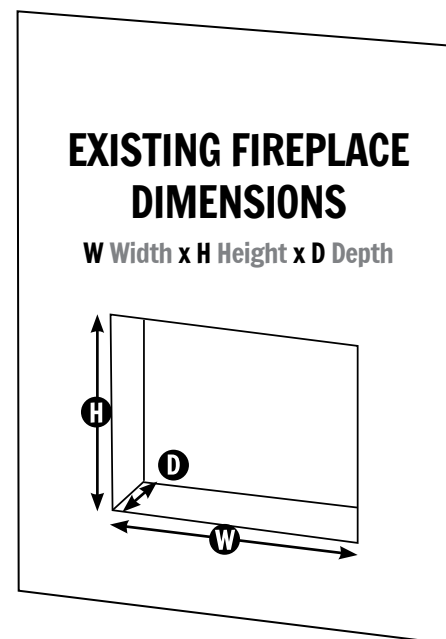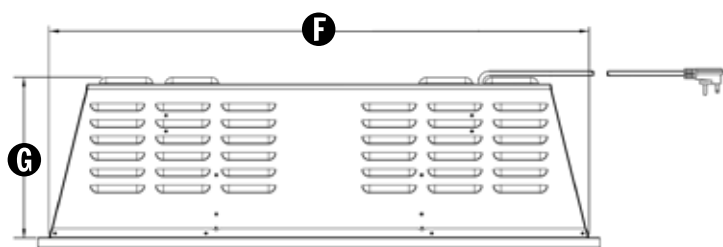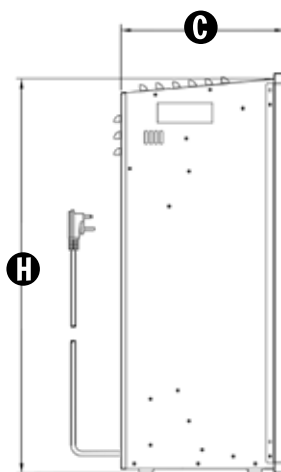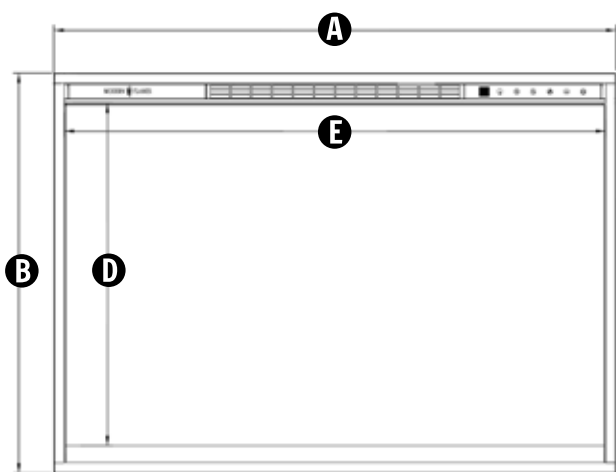

# REDSTONE - INSERT


## Optional Insert Surrounds Specs

**RS-2621 - Small Surround**

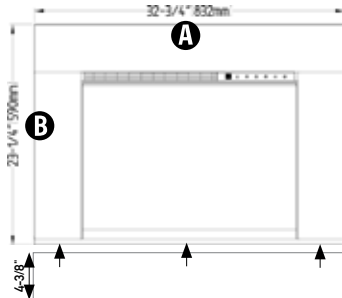


	Model	A	B	Width	Part Number
SMALL SURROUND	RS-2621	32-3/4"	23-1/4"	5"	TK-RS26-3324 - Surround
	RS-2621	32-3/4"	27-5/8"	5"	with Bottom Riser
LARGE SURROUND	RS-2621	36-3/4"	25-1/4"	7"	TK-RS26-3726 - Surround
	RS-2621	36-3/4"	31-5/8"	7"	with Bottom Riser

**RS-3021 - Small Surround**

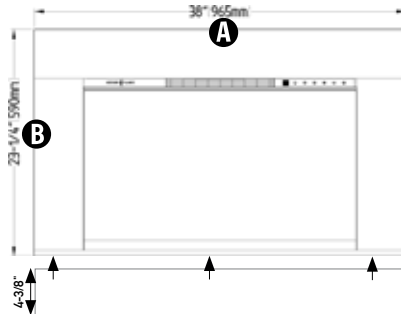


	Model	A	B	Width	Part Number
SMALL SURROUND	RS-3021	38"	23-1/4"	5"	TK-RS30-3824 - Surround
	RS-3021	38"	27-5/8"	5"	with Bottom Riser
LARGE SURROUND	RS-3021	44"	26-1/4"	8"	TK-RS30-4427 - Surround
	RS-3021	44"	33-5/8"	8"	with Bottom Riser

**RS-3626 - Small Surround**

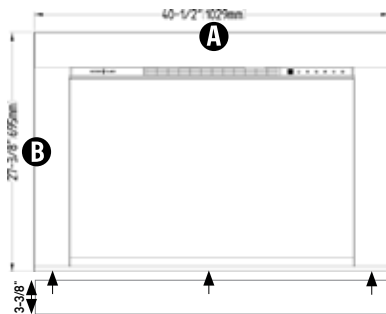

	Model	A	B	Width	Part Number
SMALL SURROUND	RS-3626	40-1/2"	27-3/8"	4"	TK-RS36-4128 - Surround
	RS-3626	40-1/2"	30-3/4"	4"	with Bottom Riser
LARGE SURROUND	RS-3626	44-1/2"	29-3/8"	6"	TK-RS36-4530 - Surround
	RS-3626	44-1/2"	34-3/4"	6"	with Bottom Riser

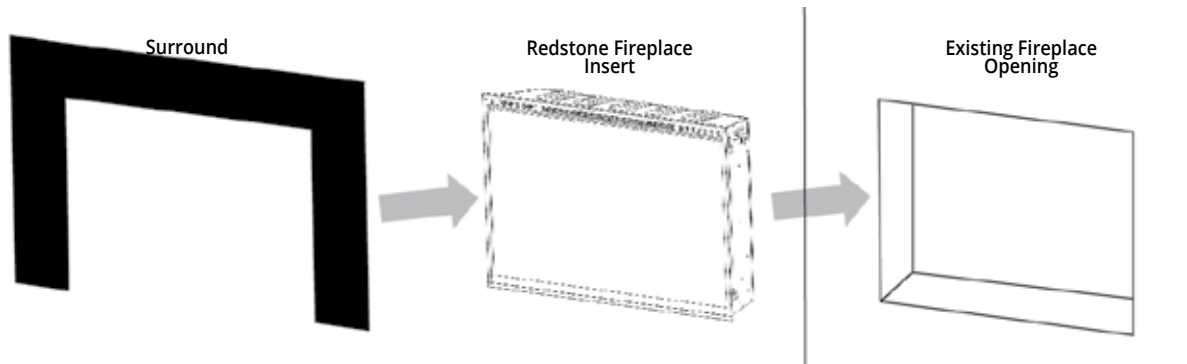


## RedStone optional trim installation instructions

### Removing the RedStone trim

**1**


Step 1 - From the rear of the fireplace, remove four phillips head screws from four corners.

For ease of install, lay fireplace face down on a cloth (soft) surface, when installing trim pieces.

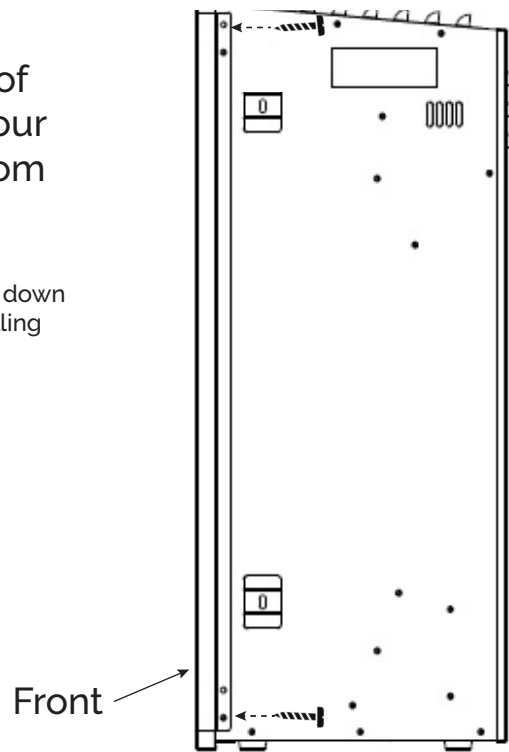

**2**

Step 2 - Remove screws from perimeter using a P2 phillips head screwdriver. (Save for reuse)

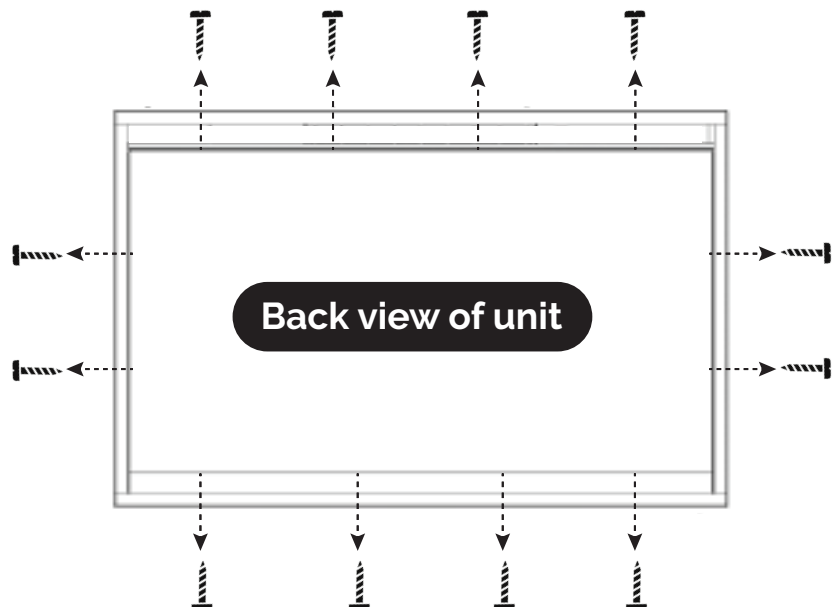


## Installing the RedStone optional trim


**3** Step 3 - Install both side trim pieces first using screws from step 1.

**4** Step 4 - Once sides are installed, install top and bottom trim.

**5** Step 5 - Install Trim to Trim screws (8 screws total).

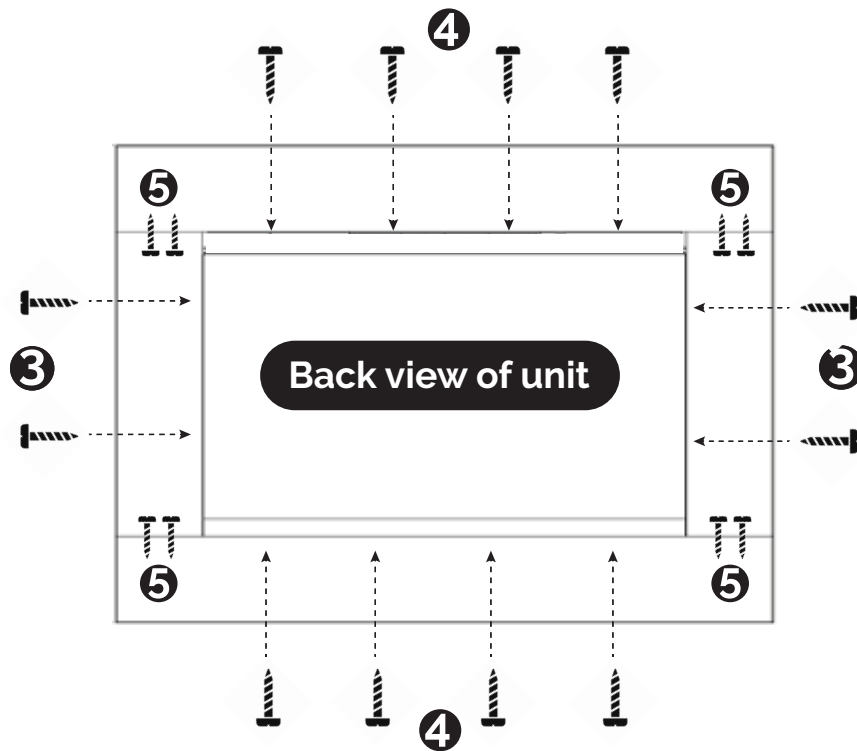

For ease of install, lay fireplace face down on a cloth (soft) surface, when installing trim pieces.

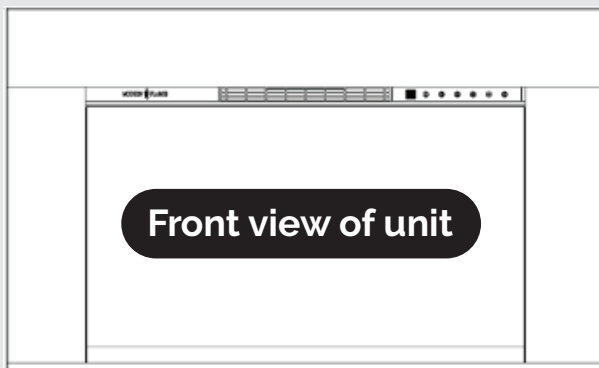

If thin trim on bottom is desired,  
attach as noted

